



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	73103	Lower Housing	1
2	73112	Upper Housing-USPRO	1
2a	73113	Upper Housing - Envy Li	1
3	79049	Screw	7
4	66303	Blade Bracket	1
5	66122	Lever Arm	1
6	201001	Lever Arm Bushing	1
7	200967	Lever Arm Screw	1
8	66319	Blade Screw	2
9	75296	Blade Guard	1
10	73091	Motor/Sled Assembly	1
11	73061	Torsion Spring	1
12	73087	Yoke	1
13	73106	Power Supply (not pictured) UK	1
13	73111	Power Supply (not pictured) Int'l	1
14	200969	Plug EU (not pictured)	1
15	200970	Plug UK (not pictured)	1
16	200971	Plug AU (not pictured)	1
17	200972	Plug BZ (not pictured)	1
18	200973	Plug US/CA (not pictured)	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

**IMPORTANT INFORMATION**

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.