andis®

MODEL BGS CLIPPER
120 VOLT

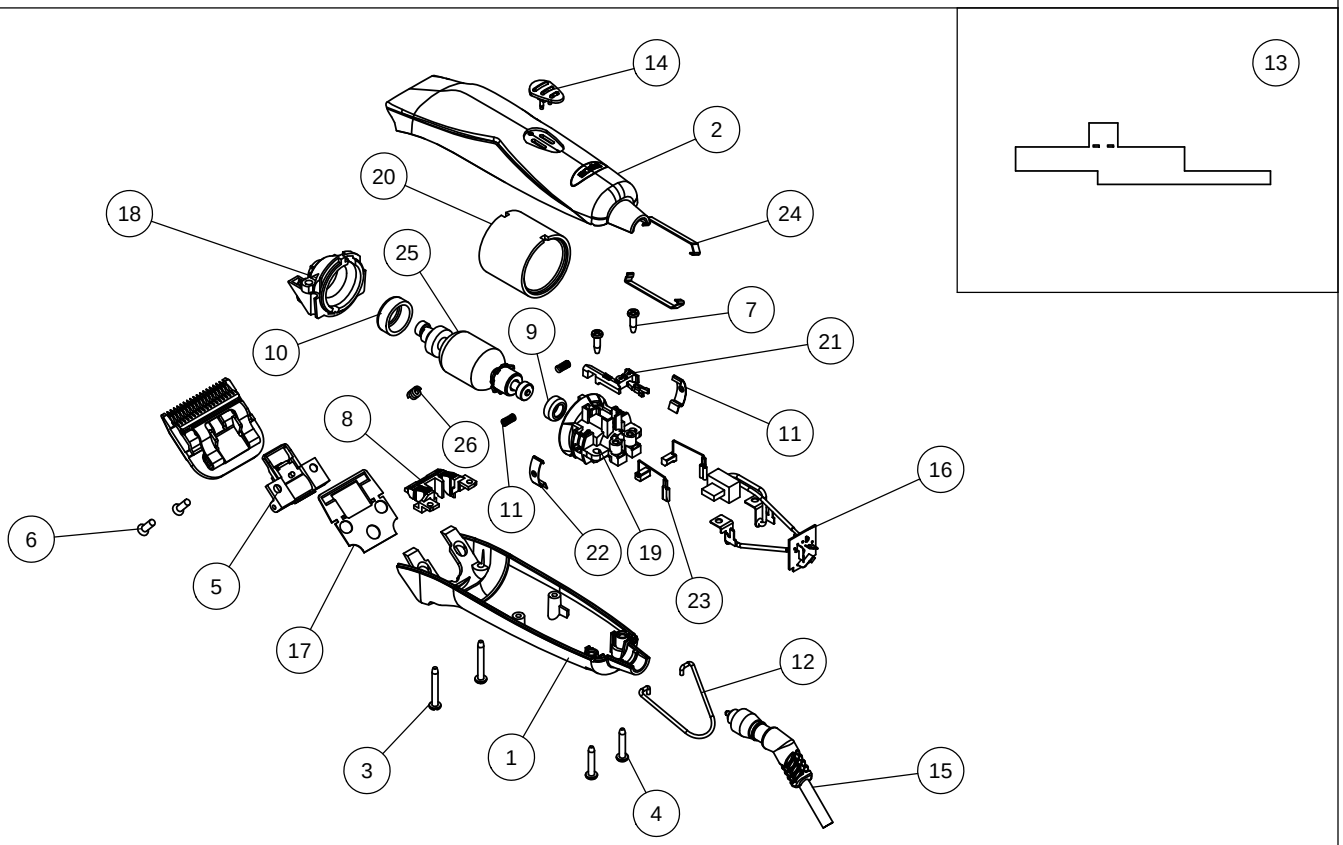

Item No.	Part No.	Description	Qty. Req'd
1	63121	Lower Housing	1
2		Upper Housing	
2a	63123	Upper Housing - Printed	1
3	64606	Front Housing Screw	2
4	60804	Rear Housing Screw	2
5	21743	Hinge Assembly	1
6	27864	Blade Hinge Screw	2
7	65828	Screw	2
8	S20651	Quad Blade Drive Assy.- Bagged	1
9	21067	Small Bearing Ring	1
10	21068	Large Bearing Ring	1
11	63803	Brush Spring	2
12	63134	Hanger Bail	1
13	60083	Oil Seal	1

Item No.	Part No.	Description	Qty. Req'd
14	63126	Switch Button	1
15	63164	Corded Adaptor	1
16	63081	Electrical Assembly	1
17	100082	Hair Guard	1
18	63111	Front Motor Frame	1
19	63131	Rear Motor Frame	1
20	64529	Field Shell Assembly	1
21	63128	Switch Actuator	1
22	65805	Brush Retain Clip	2
23	63114	Carbon Brush w/ Terminal	2
24	64514	Motor Frame Clip	2
25	63167	Armature Assembly	1
26	22909	Booster Spring	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.

Form # 200072	Revision: B	Date: 10/24/14