andis®

SERVICE PARTS LIST
MODEL US-1 CLIPPER
120 VOLT

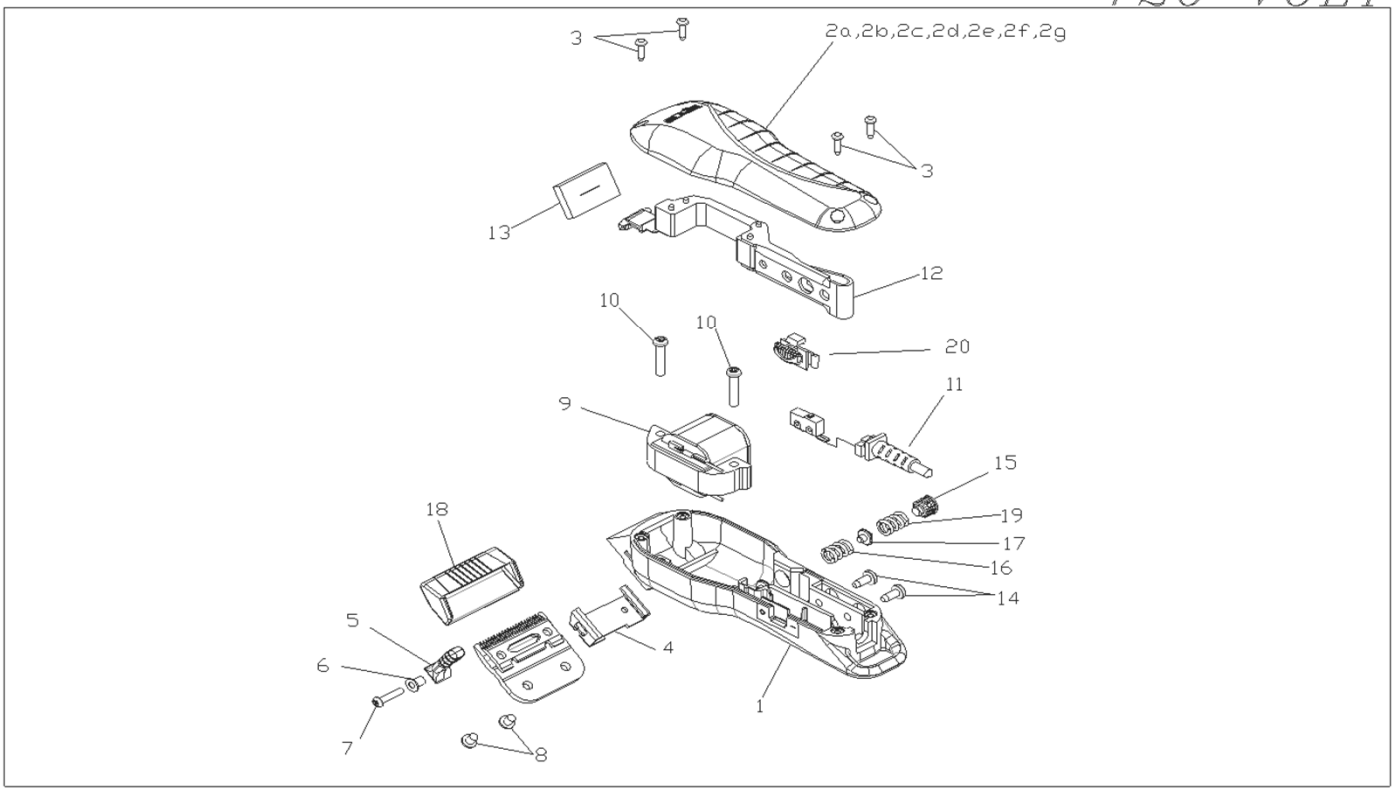

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	201792	Lower Housing	1
2		Upper Housing	
2a	66189	Upper Housing - Red (envy)	1
2b	66249	Upper Housing - Gold (Fade)	1
2c	66278	Upper Housing - Vlack (envy)	1
2d	66269	Upper Housing - Met. Red (TackMate)	1
2e	66289	Upper Housing - Black (EasyClip)	1
2f	66309	Upper Housing - Gray (Barber Combo)	1
2g	66343	Upper Housing - Chrome	1
3	201136	Housing Screw	4
4	66303	Blade Bracket	1
5	66122	Lever Arm	1
6	201001	Lever Arm Brushing	1
7	66107	Lever Arm Screw	1
8	66319	Blade Screw	2
9	200494	Field Assembly with terminal	1
10	201134	Field Screw	2
11	201038	Cord and Swtich Kit	1
12	S66127	Armature Assembly	1
13	66131	Hair Guard	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
14	66394	Armature Mounting Screw	2
15	66114	Power Screw	1
16	66108	Power Spring	1
17	66116	Spring Pad	1
18	75296	Blade Guard	1
19	66302	Power Spring - Red	1
20	200584	Switch Button	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.